


② 1 ① 2 ③3 ④5 ⑤6 ⑥7


GROHE

ENJOY WATER®




32 696




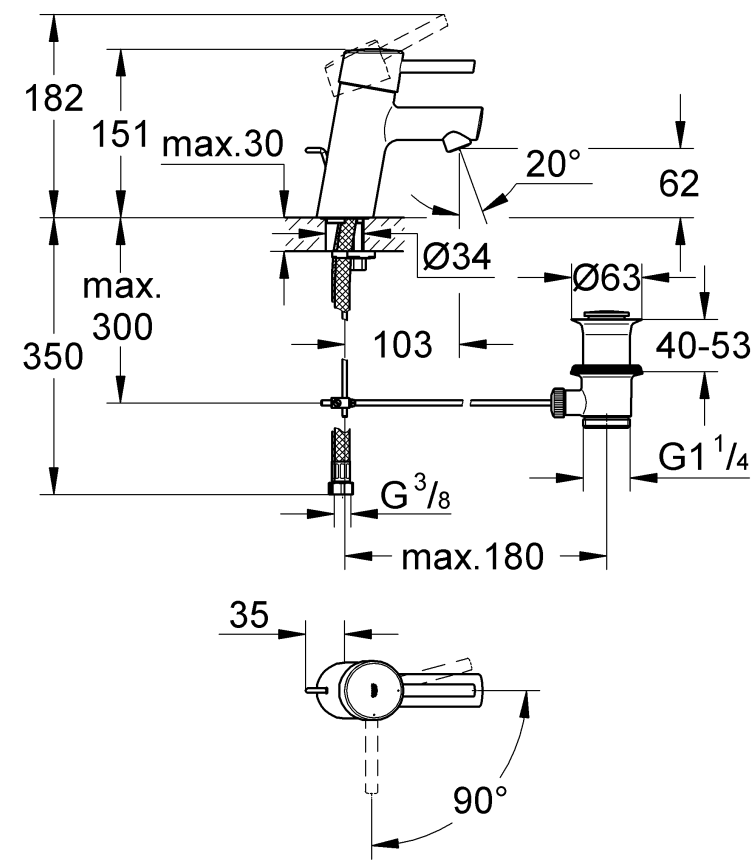


32 697

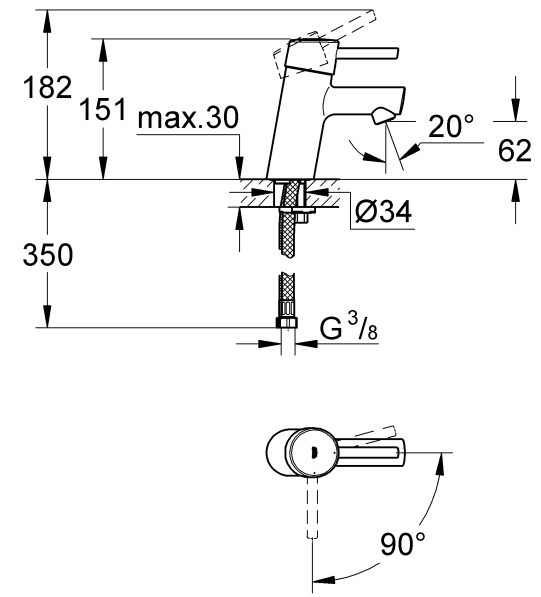

32 698

 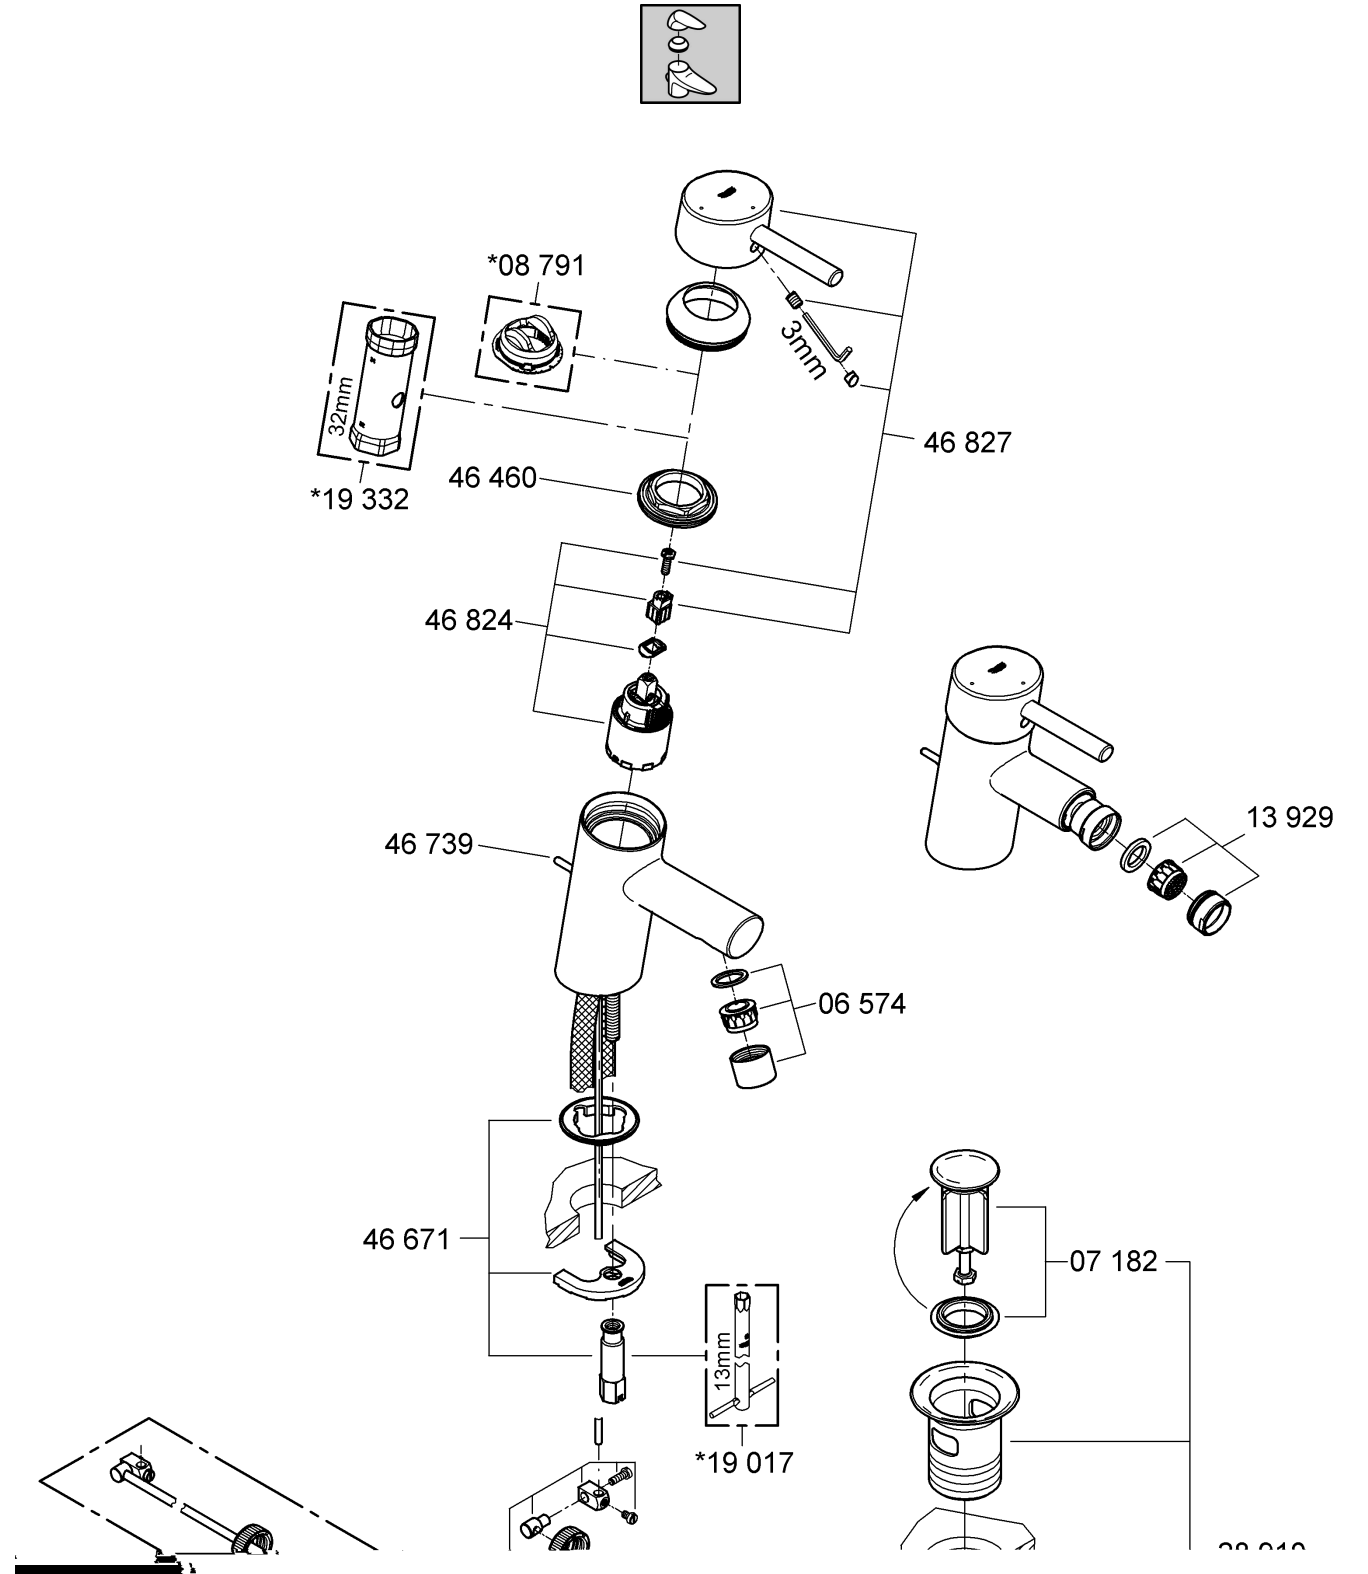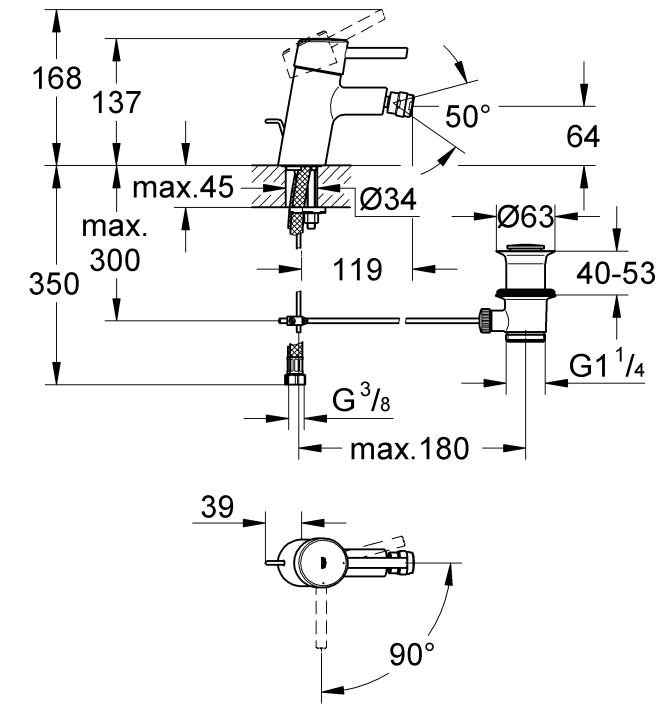

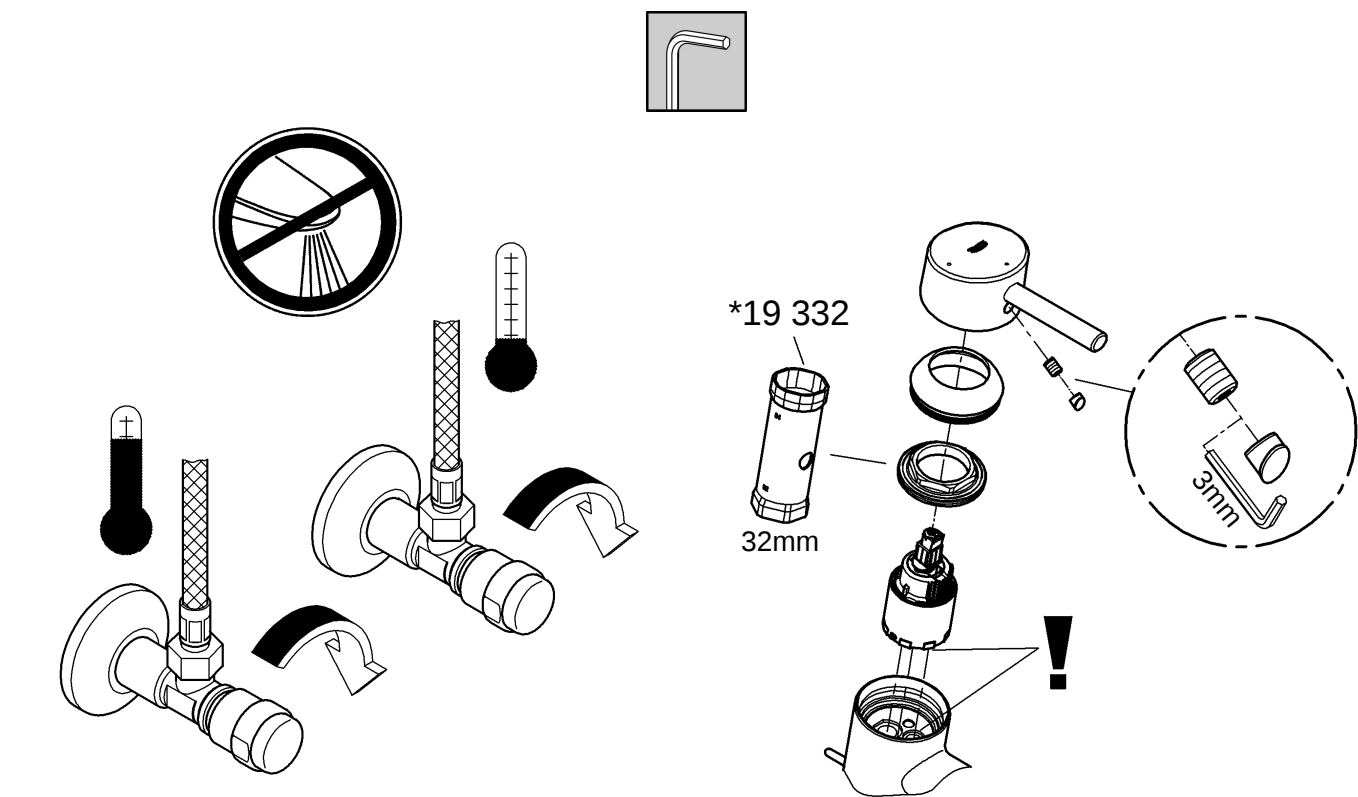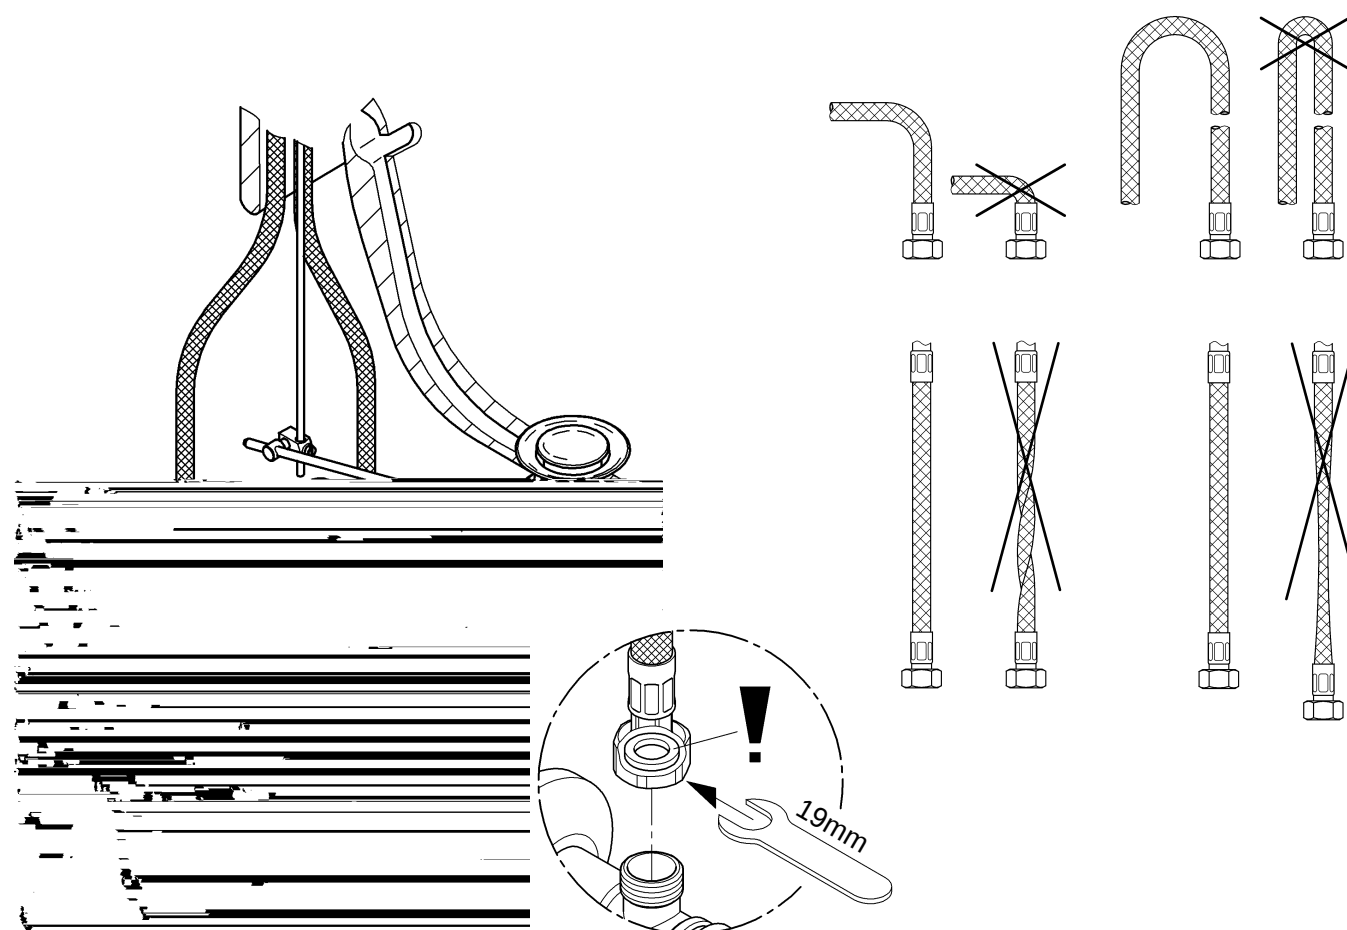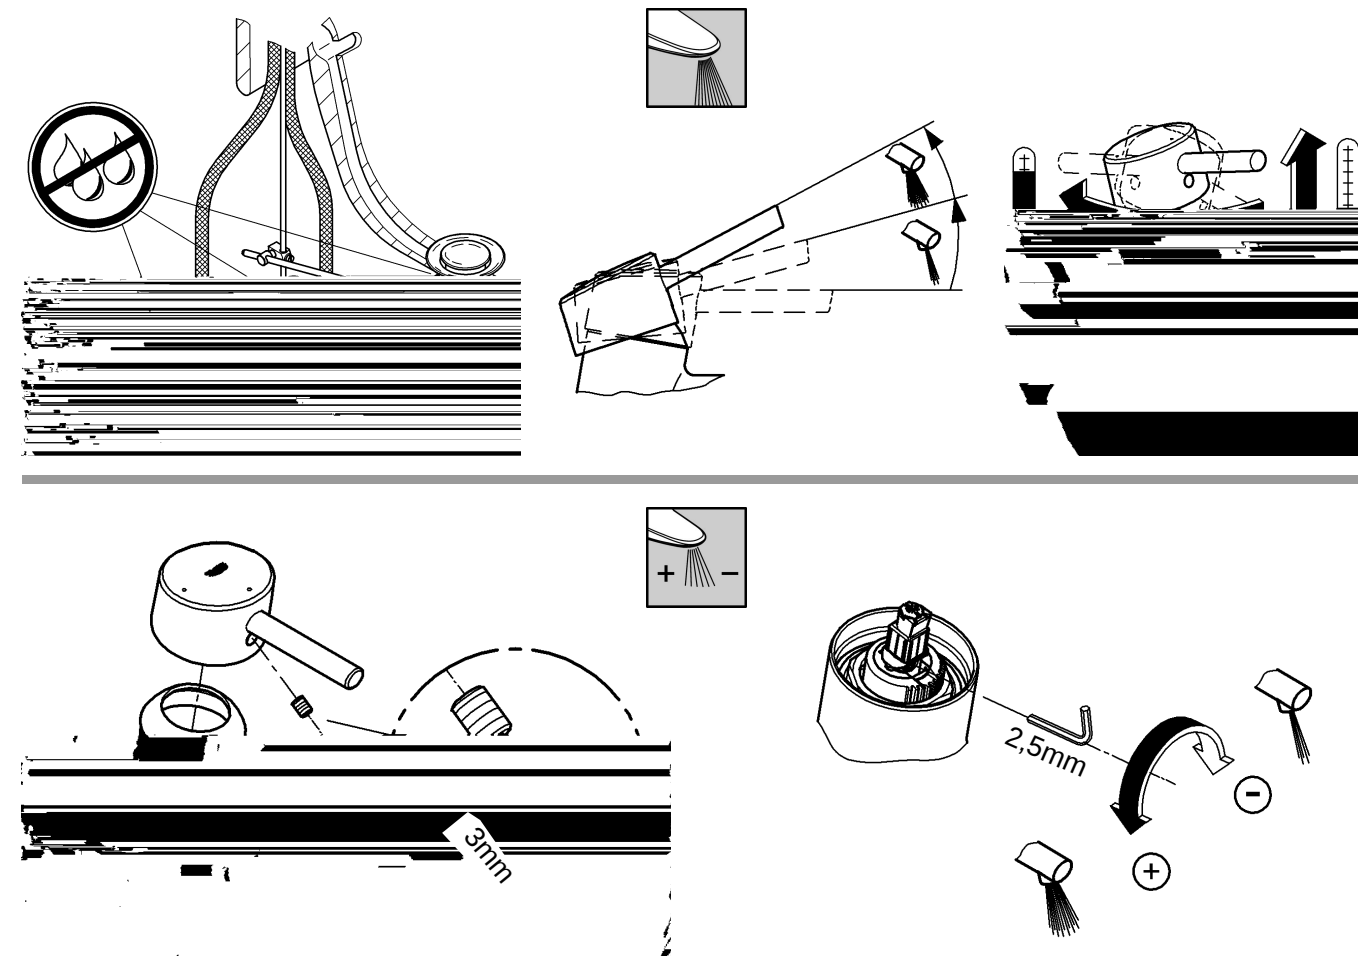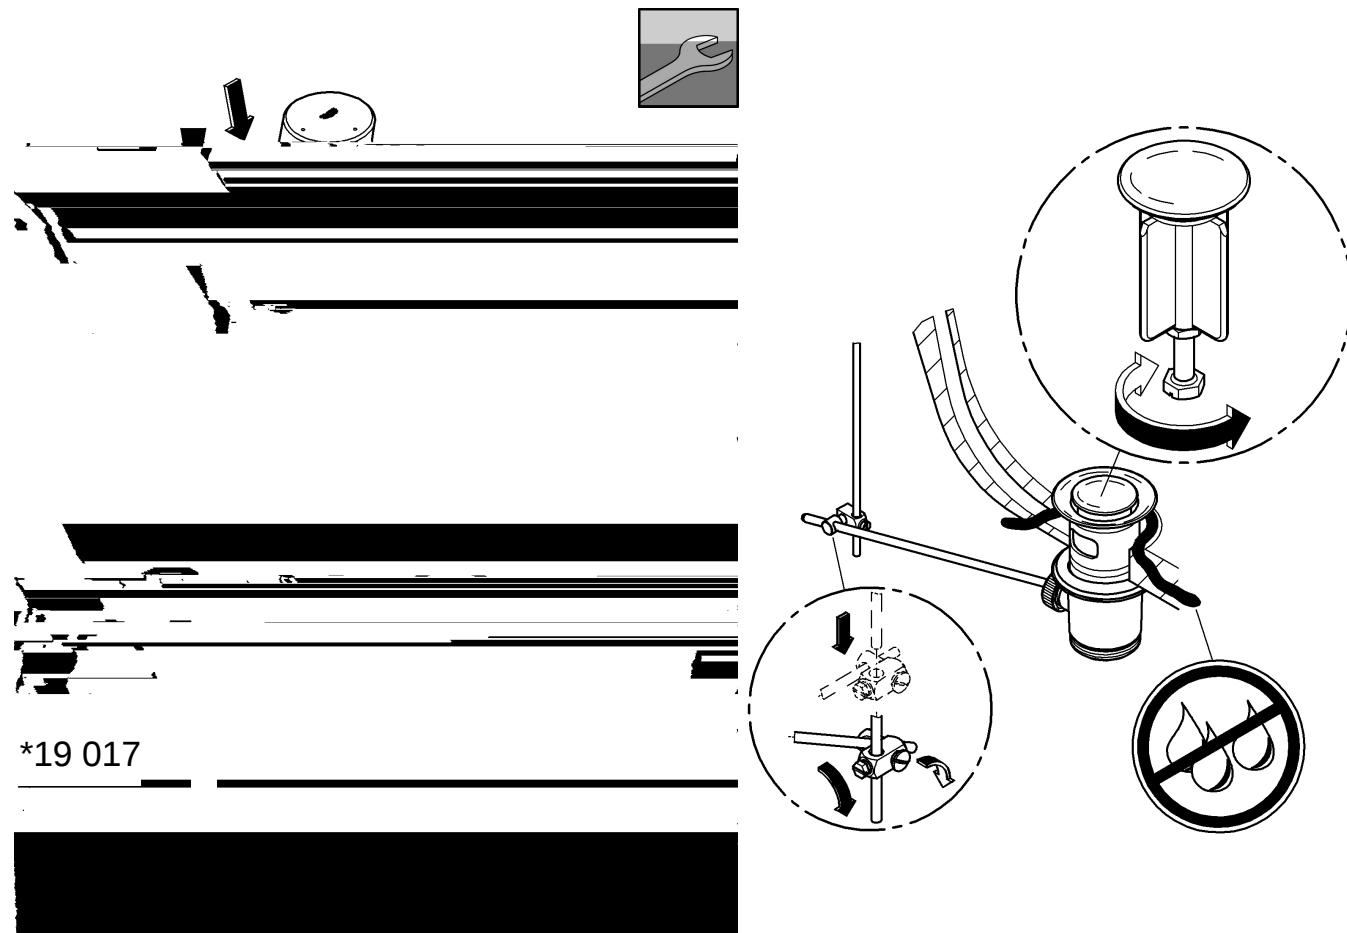



La documentation technique/produit est exclusivement destinée aux plombiers et aux personnels qualifiés.
Penser à la remettre à l'utilisateur.

Domaine d'application:

Un fonctionnement avec des accumulateurs sans pression (chauffe-eau à écoulement libre) n'est **pas possible!**

Caractéristiques techniques

Pression dynamique:	minimale 0,5 bar – recommandée 1 à 5 bars
Pression de service:	10 bars maxi.
Pression d'épreuve:	16 bars
Débit à une pression dynamique de 3 bars:	env. 12 l/min
Température de l'eau chaude	80 °C maxi.
Recommandée (économie d'énergie):	60 °C

Installer un réducteur de pression en cas de pressions statiques supérieures à 5 bars.

Eviter les différences importantes de pression entre les raccords d'eau chaude et d'eau froide!



Installation
Bien rincer les canalisations avant et après l'installation (respecter la norme EN 806)!
Possibilité de montage d'un limiteur de température (réf. 08 791).



Fonctionnement
Contrôler l'étanchéité des raccords et contrôler le fonctionnement de la robinetterie.
Fonction économie d'eau par point dur perceptible à mi-course d'ouverture du levier.



Limiteur de débit
La limitation du débit est déconseillée avec des chauffe-eau instantanés à commande hydraulique.



Maintenance
Contrôler et nettoyer toutes les pièces, les remplacer le cas échéant.
Fermer les arrivées d'eau en cas de maintenance.



Contrôler le siège des joints lors du montage de la cartouche.
Insérer la bague fileté et serrer jusqu'au blocage.



Pièces de rechange voir vue explosée (* = accessoires spéciaux).
Entretien: voir les instructions d'entretien



This technical product information is exclusively for the installer or trained specialists.
Please pass these instructions on to the user.

Application:

Operation with unpressurised storage heaters is **not** possible.

Specifications

Flow pressure:	min. 0.5 bar – recommended 1 – 5 bar
Operating pressure:	max. 10 bar
Test pressure:	16 bar
Flow rate at 3 bar flow pressure:	approx. 12 l/min
Hot water inlet temperature	max. 80 °C
Recommended (energy saving):	60 °C

If static pressure exceeds 5 bar, a pressure-reducing valve must be fitted.

Avoid major pressure differences between hot and cold water supply.



Installation:
Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!
Fitting a temperature limiter is possible (Prod. no. 08 791).



Function:
Check connections for leaks and check function of fitting.
Economy function due to perceptible resistance when opening the lever.



Flow rate limitation:
The use of flow rate limiters in combination with hydraulic instantaneous heaters is not recommended.




Maintenance:
Inspect and clean all components and replace if necessary.
Shut off water supply for maintenance work.



When installing the cartridge, ensure that the seals are correctly seated.
Screw in and tighten screwing.



Replacement parts: see exploded drawing (* = special accessories)
Care: see Care Instructions

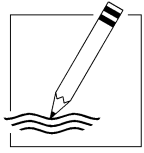

Handwriting practice lines consisting of 20 horizontal lines.

D Grohe Deutschland Vertriebs GmbH Zur Porta 9 32457 Porta Westfalica Tel.: +49 571 3989-333 Fax: +49 571 3989-999	DK GROHE A/S Walgerholm 11 3500 Vaerløse Tel.: +45 44 656800 Fax: +45 44 650252	I Grohe S.p.A. Via Crocefisso, 19 20122 Milano Tel.: +39 2 959401 Fax: +39 2 95940263	RO Grohe AG Reprezentanta Strada Nicolae Iorga 13, Corp B 010432 Bucuresti (Sector 1) Tel.: +40 21 2125050 Fax: +40 21 2125048
A GROHE Ges.m.b.H. Wienerbergstraße 11/A7 1100 Wien	E GROHE España S.A. C/ Botanica, 78 - 88 Gran Via L'H - Distr. Econòmic 08908 L'Hospitalet de Llobregat	IND Grohe India Pvt. Ltd. 14th Floor DLF Building No. 5, Tower A	S GROHE A/S Kungsängsvägen 25 753 23 Uppsala
Fax: +43 1 6884535 B GROHE nv - sa Diependaalweg 4a 3020 Winksele Tel.: +32 16 230660 Fax: +32 16 239070	Tel.: +34 93 3368850 Fax: +34 93 3368851 EST LT LV GROHE AG Eesti filiaal Tartu mnt 16 10117 Tallinn Tel.: +372 6616354 Fax: +372 6616364	Gurgaon - 122002 Haryana Tel.: +91 124 4933 000 Fax: +91 124 4933 001 IS BYKO hf. Skemmuvegi 2 200 Kópavogur Tel.: +354 515 4000 Fax: +354 515 4099	Fax: +46 771 141315 SLO GROSAN inženiring d.o.o. Slandrova 4 1000 Ljubljana Tel.: +386 1 5633060 Fax: +386 1 5633061 TR GROME IC Ve Dis Ticaret Limited Sirketi Surya Plaza - Narekhowa Caddesi
BG Търговско представителство Grohe AG България Етаж 8, офис 21.	F GROHE s.à.r.l. 60, Boulevard de la Mission	J	
1404 София Тел. : +359 2 9719959 +359 2 9712535 Факс.: +359 2 9712422	92400 Courbevoie - La Défense Tel.: +33 1 49972900 Fax: +33 1 55702038 FIN	TRC Building, 3F 1-1 Heiwajima 6-chome, Ota-ku Tokyo 143-0006 Tel.: +81 3 32989730	34398 Maslak-Istanbul Tel.: +90 212 3281344 Fax: +90 212 3281772 ITA